


## LE200 - COOLING




- T1 ● LED "T1" Target temperature 'T1' active
- T2 ● LED "T2" Target temperature 'T2' active
- LED "AGITATOR" in all mode Agitator is switched on
- LED "COMPRESSOR"
- Mode ● LED "COOLING MODE"
  - blinking Cooling start delay is activ
  - continuous "Cooling mode" is activ

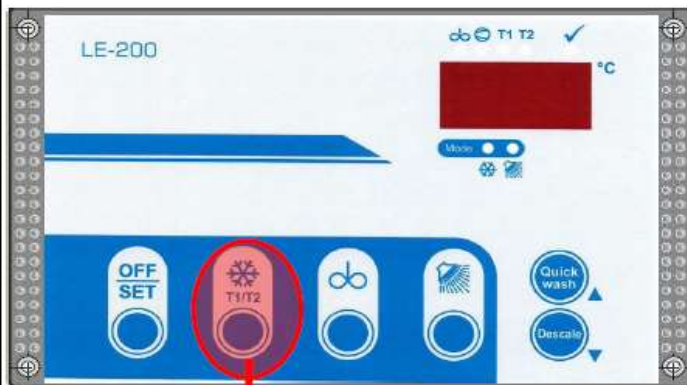

### Cooling Start Delay

To start cooling immediately/overwrite the delay press the cooling button **TWICE**

## LE200 - WASHING

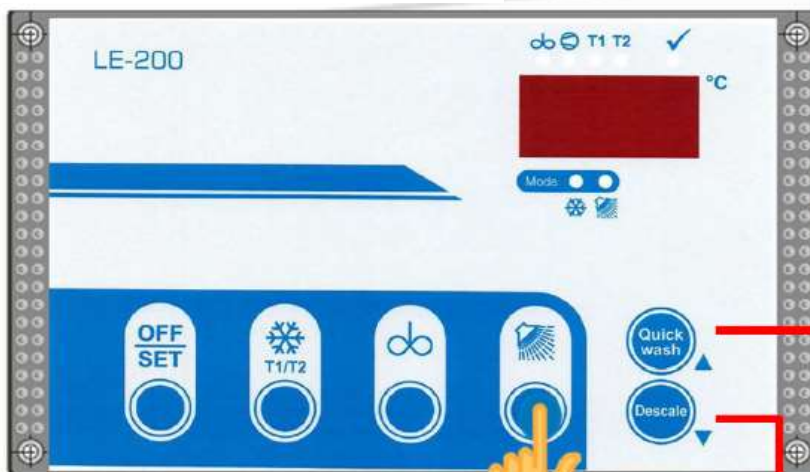

Main Wash –  
Press once

Press and hold for 3  
seconds for Quick wash

Press and hold for 3  
seconds for manual  
descale

NB: If three dosing pumps installed and automated descale selected the  
"Descale" button has no function